


# Keihin PWM Carburetor

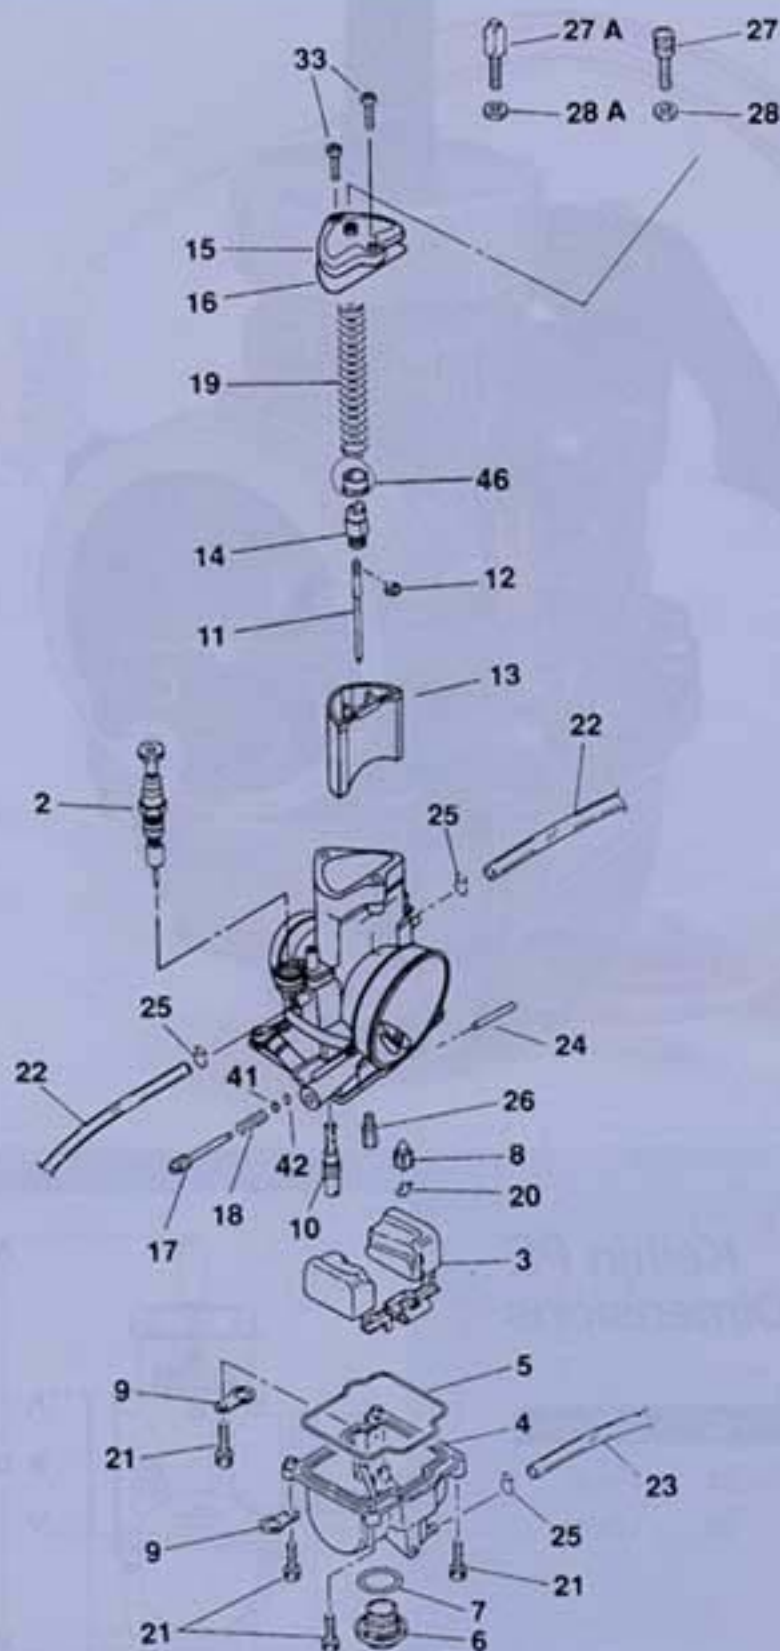

## PWM Exploded View

Description	PWM38
2 Starter Valve Comp	018-201
3 Float	018-202
4 Float Bowl Comp	018-203
5 Gasket Float Bowl	018-113
6 Plug Screw	018-128
7 O-Ring Plug Screw	018-664
8 Float Valve Comp	018-504
9 Anchor Plate	018-204
10 Slow Jet	See pg 153
11 Jet Needle	See pg 150
12 Clip, Jet Needle	018-033
13 Throttle Valve	See pg 146
14 Cable Holder	018-205
15 Top	018-206
16 Gasket, Top	018-207
17 Air Adjust Screw	018-089
18 Spring	018-090
19 Throttle Valve Spring	018-531
20 Clip, Float Valve	018-674
21 Screw, Float Bowl	018-209
22 Bowl Vent Pipe	NA
23 Overflow Pipe	NA
24 Float Pin	018-670
25 Clip	018-098
26 Main Jet	See pg 152
27 Cable Adjuster	018-210
27a Cable Adjuster	018-005
27b Cable Adjuster	018-306
28 Nut Cable Adjuster	018-544
28a Nut Cable Adjuster	018-008
31 Cable Sealing Cap	018-002
32 Bowl Vent Pipe Comp	NA
33 Screw (Top)	018-211
41 Washer	018-208
42 O-Ring	021-043
46 Collar	018-550